

Platinum
FX
SERIES

January 1995 • A-16396



Williams®
WMS GAMING INC.
Slot Machine
Model 400 Service Manual

© 1995 WMS Gaming Inc.

3401 N. California Avenue, Chicago, Illinois 60618

Phone (312) 961-1620



NOTICE

You can use *either* the SPIN REELS button or the SLOT HANDLE to initiate tests. For simplicity, this chapter only mentions the SPIN REELS button.

Administration Mode Controls

Switch	Administration Mode Function
• DIAGNOSTIC	Enters and advances through Administration Mode test series
• JACKPOT RESET KEY	Selects tests within a series or sequence
• SPIN REELS (also SLOT HANDLE)	Initiates tests (except for input tests); selects setup options

Perform Test and Setup Functions in Administration Mode

1. Turn the JACKPOT RESET KEY to select a test within a series or sequence. You'll find the JACKPOT RESET KEY switch behind the SLOT HANDLE. Insert and turn the key.
2. Press the SPIN REELS button to initiate a test. SPIN REELS is on the player panel. The button lights up to remind you to start the test.

Exit Administration Mode

To exit Administration Mode, either...

- Close the front door (except during Door Switch Test, Series 1, Test 13).
- Repeatedly press DIAGNOSTIC until "door open" appears on the display. Displays that read this way indicate Door-Open Mode, one of many slot machine states. When the game reports a tilt condition, the Bet Display doesn't zero. Instead, it indicates the tilt number. Instead of blanking, the other displays indicate the tilt type ("coinJ," "HPrE," etc).

Administration Mode Displays

This chapter introduces an Administration Mode series or sequence with a highlighted table. (A test series may contain several *test sequences*.) Each table presents initial values for the Credit, Win Meter and Max Bet displays. These values document the way a typical display reads before you make adjustments. Sometimes, a series and its first sequence display identical values. In that case, a table appears only at the sequence. Take a look at the table for Series 0, Sequence 1 below...

Series 0. Host Communications, Sound Volume; Demo, Cash and Credit Modes, Reel Speed, Etc.

Series 0 includes 10 sequences... Sequences 1 and 2 deal with host communications protocol. Sequences 3 through 6 affect the sound system. Sequences 7 is Reel Speed. Sequence 9 and 10 enable special game modes.

Series 0 Host Communications Protocol is the first sequence in of Administration Mode.

Supported Host Protocols


Credit Display	Protocol
NONE	No Host Communication
SAS	IGT System
SdS	Bally System
ACP	WMS Protocol

• Sequence 1. Host Communications Protocol

Initial Display Values:	Credit	Win Meter	Bet
	NONE	ON.	0

NOTICE

Some machines use a square CALL ATTENDANT button, instead of the round one shown.

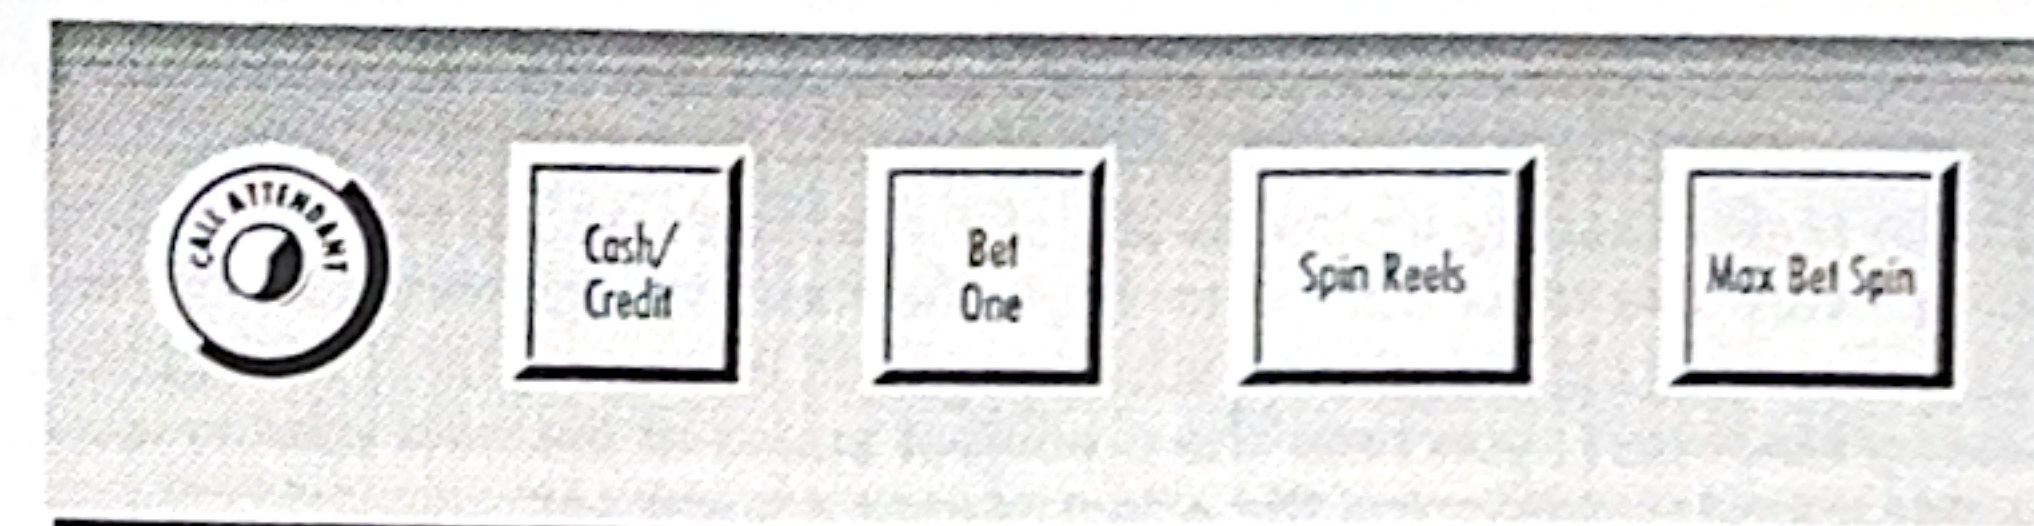

The Credit Display provides a mnemonic for a host communications protocol. The Win Meter Display indicates whether this mnemonic represents the selected protocol. "ON" indicates the selected protocol. "OFF" indicates the other supported protocols.

Your slot machine supports several protocols. See the table *Supported Host Protocols*.

Slot machines that use the SAS+ Host Protocol display Sequence 1. Machines with another type protocol skip Sequence 1 and begin Series 0 with Sequence 2.

- To view each protocol, turn the JACKPOT RESET KEY.
- To select a protocol, press SPIN REELS. If you aren't using a host system, select "NONE."
- To save settings and enter Sequence 2, press the DIAGNOSTIC button.

• Sequence 2. Machine Protocol Address (SAS Protocol)

Initial Display Values:	Credit	Win Meter	Bet
	Addr	3-Digit No.	0

The Credit Display contains the expression, "Addr," the abbreviation for "Address." The Win Meter Display indicates the slot machine's communication address. If you haven't set the address yet, three zeros appear. You can vary this level from 0 to 127. The flashing digit indicates the first value to set.

- To change the flashing digit value, press SPIN REELS one or more times.
- To advance to the next digit, turn the JACKPOT RESET KEY. With each turn of the key, the flashing digit sequentially advances from right to left. Suppose that the flashing digit is the leftmost one: Return to the rightmost digit by turning the JACKPOT RESET KEY one more time.
- To save settings and enter Sequence 3, press the DIAGNOSTIC button.

• Sequence 3. Normal Sound Volume

Initial Display Values:	Credit	Win Meter	Bet
	Snd 1	3-Digit No.	0

NOTICE

You can exit Administration Mode and save changes anytime by closing the main door.

